

7. Press [MODE], the LCD screen will display "SCENT PAUSE". Use the UP/DOWN buttons to set the Pause seconds you want (Min. 10 secs to Max.300 secs)




Example: setting the diuser work time to:10 secs on (WORK), 300 secs off (PAUSE)

The diffuser will alternate between active (SCENT WORK) mode and stand-by (SCENT PAUSE) mode for the duration of the operation period. To increase fragrance concentration; increase the work time, or decrease the pause time.

8. Press [MODE] to complete set up for all Events by repeating above steps from 2-7 for each additional events (up to a maximum of 4).

There are 4 Events, show as below

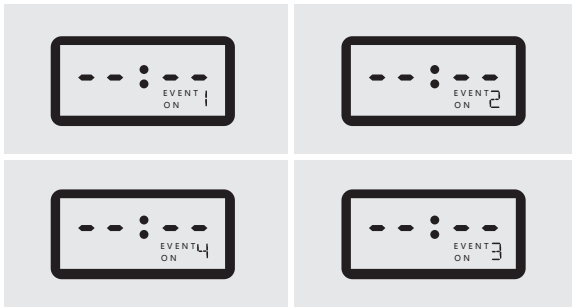

D. Setting Upload

Press "Done" to upload the setting to the diffuser.

E.Lock & Unlock


Lock/Unlock : press the Lock Button for 5 seconds to Lock/Unlock the Remote Control.

F.Reset


Press [MODEL] button for 15 seconds to Reset. The default setting mode is only 1 event: Work every day, Working period 08:00-22:00, working 60 seconds, pause 60 seconds.

3.Fragrance oil installation and replacement


If using it for the first time, please install the oil bottle first then connect the power and do the related settings.

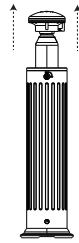

1.Pull up,you can pull out the oil bottle.

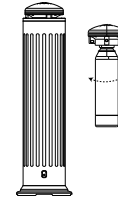

2.Turn left to take out the oil bottle and pour the oil in it.

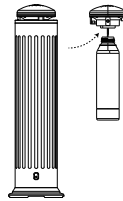

3.Turn right after you finish pour the oil in it.




4.The bottle is put into the machine, plugged into a power supply, set the time and start using.

! Attention

1. The Scent Diffuser machine must be operated and maintained in accordance with the endosed user manual.
2. Please refill the fragrance oil in time, forbidden to make the machine working without oil for long time.
3. DO NOT tilt the machine when replacing the fragrance oil.
4. DO NOT mix the fragrance oil refill with water.
5. Please ensure you tighten the fragrance oil bottle fully when replacing.
6. The machine should be cleaned (Use the bottle with alcohol to run the machine for 10-15 minutes) in every 2-3 months under working status.

Scent Diffuser

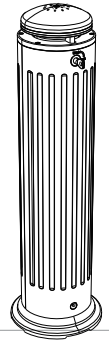

Brief Instruction

This is a free-standing install scent diffuser for medium-sized coverage area. The housing is made of plastic which is light and portable to move it.

Technical Specifications

Weight	3.3kg	12.12lb
Voltage	DC 12V	
Power Level	11W	
Noise Level	<50 dba	
Scent Coverage	2000 cbm /600 sqm /6000 sqft.	

Accessories



Adapter



Nozzle



PE gasket



Manual



O-ring seal




Remote

Operation Steps

1. Connect to power

The power of this unit can be supplied by: Connect the power with a wire to 12V power socket [DC POWER IN] on the device.

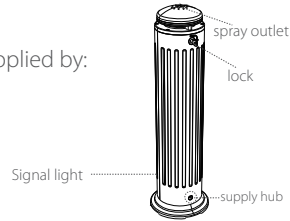

1. ON shows the Scent Diffuser is in power "On" state.	
2. OFF shows the Scent Diffuser is in power "Off" state.	
3. WORK shows the machine is Spraying time.	
4. PAUSE shows the machine is Pausing time.	


2. Working Periods Setting

The Fragrance Device is to be set 4 work periods, also can be allowed to choose the workdays according to users' requirements.

1. MODE	To change from one event to another event.
2. SET	By pressing it to do any setting, as for time setting (hour, minutes), work days and so on.
3. UP/DOWN	Slide it to adjust the time data, scent concentration data and the choice of workdays.
4.ON/OFF	To turn on or turn off the machine.
5.DONE	To Upload the Settings after setting.

*Press [ON/OFF] and [DONE], the device will make a sound, means it has been received. No sound means it has not been received.

*[DONE] The command should be executed after the device is turned on.If the device is not turned on, there will be a sound but no execution.

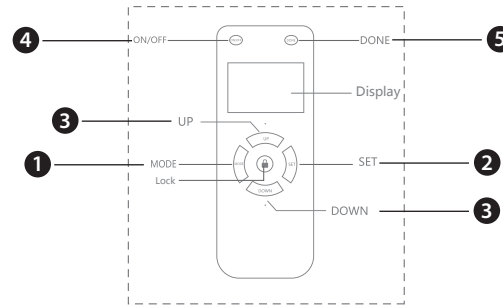

A.Set the System Time

1. Adjust the system time to be in accordance with the Beijing time, and the time is 24-hours system.



2. Press [SET] for the first time, the hour figure flash, press [UP/DOWN] to adjust the hour.



Press [SET] for the second time, hour setting ends and minute figure flash, press [UP/DOWN] to adjust the minute.



Press [SET] for the third time, minute setting ends, the work day figure flash, press [UP/DOWN] to adjust the work days. Press [SET] for the fourth time, the system time and work day setting ends.

B. Set the Operation Periods


1. Press [MODE], the LCD screen will light up and display "EVENT ON " Means the event 1 On.



2. Press [SET], the hour will flash allowing you to adjust the start time for period 1. Use the UP/DOWN buttons to set the hour.



3. Press [SET] to save the hour setting, move to the minutes Use the UP/DOWN buttons to set the minutes.

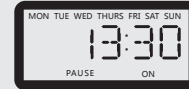

4. Press [SET] to set the work day,the work day option will flash . Use the UP/DOWN buttons to select the work day options. Options as below chart. Press [SET] to save.



Example: setting the start time to 1.30pm on Wednesday

! Remarks!

- 1 When setting the work period, the close time is not allowed to be set before the open time.
- 2 If the working period need to cross the '00:00' point, it will need to set into 2 different events.

Work day choice: to set the work days

- | | |
|----------------------------|-------------------------------|
| ① From Monday to Wednesday | ⑩ Thursday |
| ② From Tuesday to Thursday | ⑪ Friday |
| ③ From Monday to Friday | ⑫ Saturday |
| ④ Weekends | ⑬ Sunday |
| ⑤ From Monday to Saturday | ⑭ Monday, Wednesday, Friday |
| ⑥ From Monday to Sunday | ⑮ Tuesday, Thursday, Saturday |
| ⑦ Monday | ⑯ Sunday to Thursday |
| ⑧ Tuesday | ⑰ Friday to Saturday |
| ⑨ Wednesday | |

5. Press [MODE], the LCD screen will display " EVENT 1 OFF". Repeat steps 2-3 to set the end time for period 1.



Example: setting the end time to 5.30pm (also on Wednesday).

C.Set the Fragrance Concentration

6. Press [MODE], the LCD screen will display "SCENT WORK". Use the UP/DOWN buttons to set the spraying seconds you want. Have options from 10 secs.min 300 secs.max.

